

POWERFLEX®

PART NUMBER

PFF5-1901G

DESCRIPTION

FRONT RADIUS ARM TO CHASSIS CASTER ADJUSTABLE BUSH

INSTALLATION GUIDE

Contents (parts per pack):

- 4 x Polyurethane Bushes
- 1 x PTFE/Silicone Grease
- 2 x Stainless Steel Sleeves
- 2 x Zinc Plated Mild Steel Washers

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

Fitting Instructions:

1. Remove original bush from arm.
2. Clean any dirt and corrosion from the bore of the front radi any sharp edges around the bore.
3. Fit the polyurethane bush into the arm.
4. Fit the steel washer onto the stainless steel sleeve.
5. Apply some of the supplied grease to the bore of the polyurethane part, and insert the stainless steel sleeve into the bush from the inside of the vehicle, with the thicker lip positioned towards the centre of the vehicle, as shown in Figure 1.
6. For maximum camber use a 24mm hex spanner to rotate the sleeve so that the bore is positioned as shown in figure 2.
7. Refit the arm. Tension all hardware to manufacturers recommended torque settings.


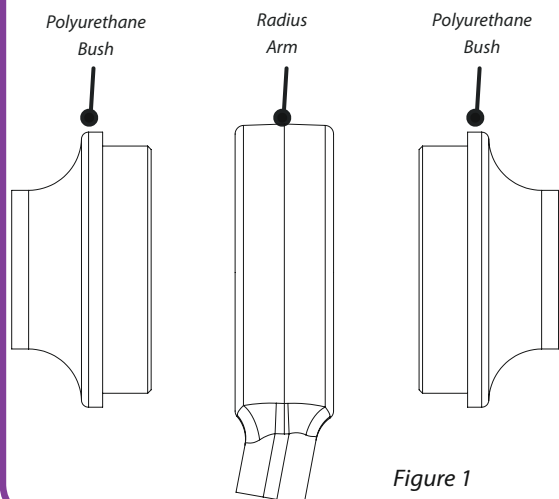


Figure 1

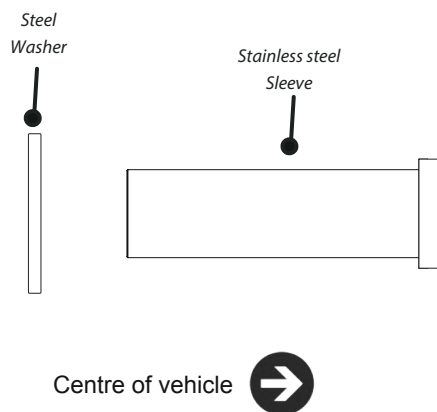

Centre of vehicle →

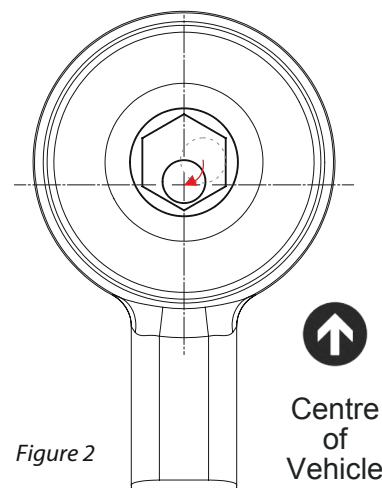


Figure 2

↑
Centre of Vehicle