

# POWERFLEX®

PART NUMBER

## PFF80-1103

DESCRIPTION

### FRONT ANTI ROLL BAR BUSH

#### INSTALLATION GUIDE

#### Contents (parts per pack):

2 x Polyurethane Bushes     1 x Grease

Please read the complete fitting instructions and check package components before fitment. These fitting instructions are to be used as a guide and in conjunction with workshop manual.

It is recommended that:

- all work to be carried out by a licensed technician;
- all safety precautions adhered to;
- wheel alignment to be checked and adjusted as required after any suspension work.
- All fasteners must be tensioned to manufacturer's torque settings.

#### Fitting Instructions:

1. Remove the front anti roll bar from the vehicle.
2. Secure the bar firmly in a vice and slowly drill away the swaged section from the bottom of the brackets to separate the bracket from the bush and the anti roll bar (Figure 1).

**Note: do not drill into the brackets more than required**

3. Remove the original rubber bushes and clean any dirt or corrosion from the brackets and the anti roll bar.
4. Apply some of the supplied grease to the bore and the end faces of each bush.
5. Fit the new polyurethane bush onto the bar and refit the brackets on the bushes.
6. Refit the anti roll bar to the car and tension all hardware to manufacturers recommended torque settings.

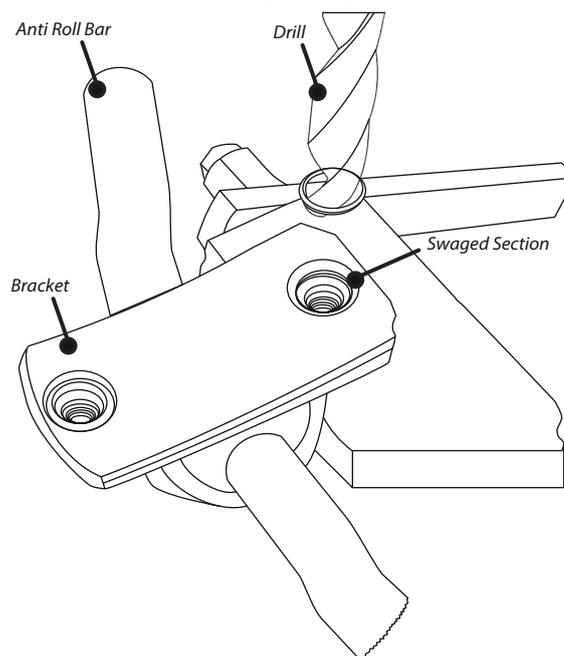


Figure 1 - how to remove the swaged section from the bracket



Figure 2 - the anti roll bar, brackets and the original rubber bush